



STRIP WIRES TO APPROXIMATELY 5/8" FROM END.

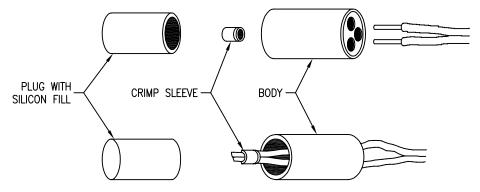

INSERT WIRES THROUGH HOLES IN BASE OF BODY

TWIST STRIPPED WIRES TOGETHER AND APPLY CRIMP SLEEVE WITH AN INDENT TYPE CRIMPING TOOL.



PUSH WIRES BACK INTO BODY. INSERT PLUG INTO BODY UNTIL IT SNAPS TIGHT.

NOTES:

- 1. ONE CONNECTOR WILL HANDLE #10, #12 AND #14 AWG WIRES.
- 2. WIRE CONNECTOR WILL ACCEPT TWO OR THREE WIRE CONNECTIONS.
- 3. MANUFACTURED BY SPEARS, MODEL DS-400, OR APPROVED EQUAL.

ONTA CLOS
The Mission City
1852

DRAWN BY: M. LEE

CHECKED BY: J. MENDOZA

APPROVED BY: G. GOMEZ

DATE: DECEMBER 2002

LOW VOLTAGE IRRIGATION WIRE CONNECTION

LS-22

CITY OF SANTA CLARA

PAGE: 67